

Divosheen Dilac

Acidic detergent descaler

Description

Divosheen Dilac is a low foam, phosphoric acid based liquid detergent/descaler, suitable for CIP and spray wash applications in the food, beverage and dairy industries.


VA1

Key properties

- Divosheen Dilac is low foaming and suitable for CIP and spray wash applications.
- Divosheen Dilac is highly acidic and effective at removing inorganic soils.
- Divosheen Dilac is a conductive liquid detergent and suitable for automatic dosing and control.

Benefits

- Highly effective in removing most inorganic scale deposits, particularly calcium carbonate and calcium phosphate, improving operational efficiency.
- Low foaming properties giving improved cleaning performance under conditions of high pressure and turbulence.
- Suitable for automatic dosing and control by conductivity, ensuring consistent delivery of product.

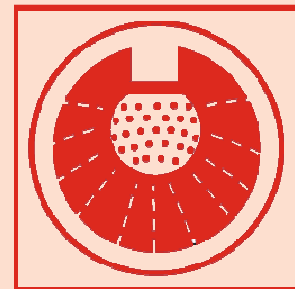

For additional information, please contact us at:

Diversey Australia Pty Ltd Toll free: 1800 647 779, Diversey New Zealand Ltd Toll free: 0800 803 615
www.diversey.com

Divosheen Dilac

Acidic detergent descaler

Use Instructions

Use Divosheen Dilac at concentrations between 1%-6%w/w (0.8%-5%v/v) at temperatures between 20°C-70°C, depending upon application and scale. Rinse product contacting surfaces with potable water after use.

Product compatibility

Divosheen Dilac is safe for use on all type of materials commonly found in CIP circuits when applied under the recommended conditions. In the event of uncertainty it is advisable to valuate individual materials before any prolonged use.

Product Specifications

| | |
|--------------------------|-------------------------|
| Appearance | Clear colourless liquid |
| Relative density at 20°C | 1.20 |
| pH | <1.2 |

The above data is typical of normal production and should not be taken as a specification

Safe handling and storage information

Store in original closed containers or (where applicable) in an approved bulk tank, away from extreme temperatures. Full guidance on the handling and disposal of this product is provided in a separate Safety Data Sheet.

Safety Reminder:

Please make sure your employees read and understand the product label and Safety Data Sheet before using this product. The label contains directions for use, and both the label and SDS contain hazard warnings, precautionary statements and first aid procedures. SDSs are available online at www.diversey.com or by calling Toll free: Australia, 1800 647 779 or New Zealand, 0800 803 615.

For additional information, please contact us at:

Diversey Australia Pty Ltd Toll free: 1800 647 779, Diversy New Zealand Ltd Toll free: 0800 803 615

www.diversey.com